


Wiring

- For connecting line use "THHN" wire or equal for 90°C minimum and connectors rated for 105°C.
- Refer to heater's name plate for temperature setting, heater watts and supply voltage.

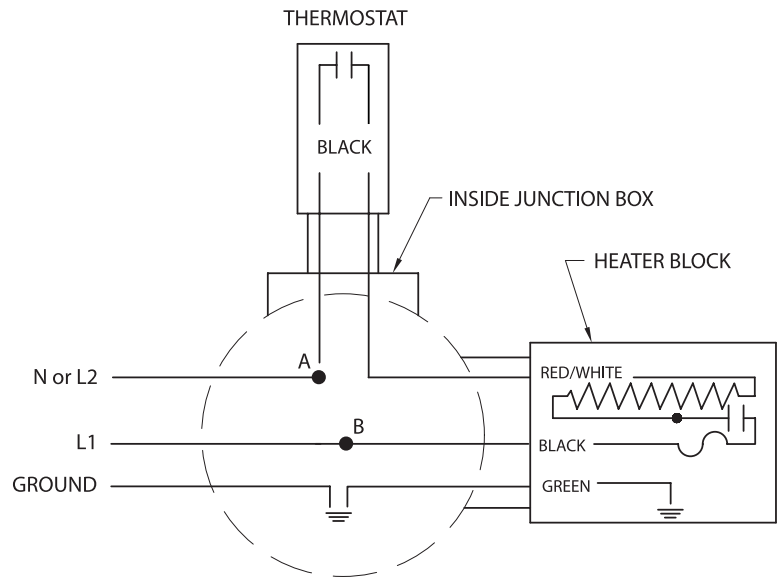

Mounting

- Mounting feet can be used with any of the heater's base holes.
- The offset nut can be rotated and adjusted for increased mounting positions.

